
 

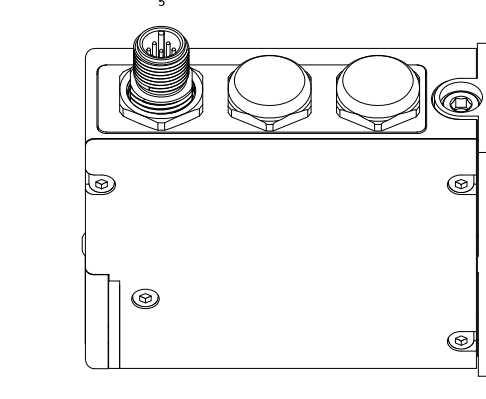





RS232 operated

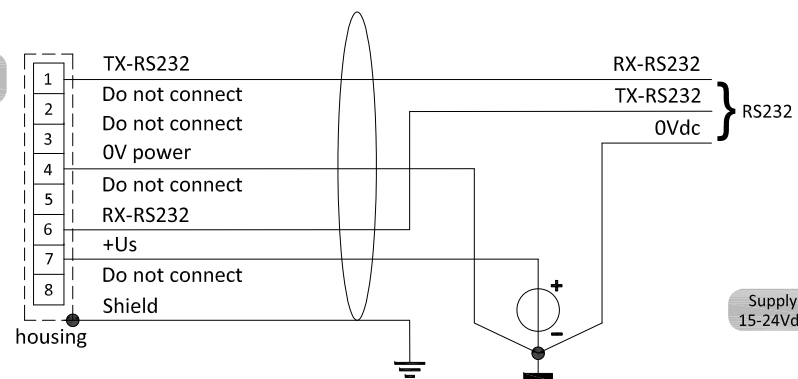

Analog operated 0-20 or 4-20mA

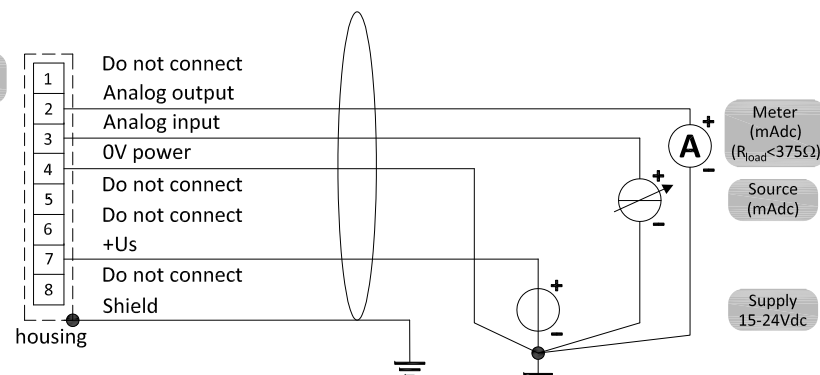

Analog operated 0-5 or 0-10Vdc

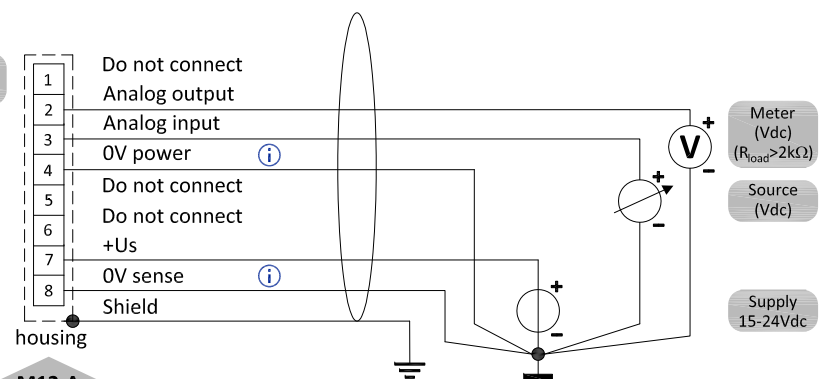

**M12-A
connector
8P
cable part
female**



0V power (pin 4) and 0V sense (pin 8) should be separately connected to the 0V terminal at the power supply.



For reliable measurements, it is important to reduce interference from outside noise on the signals.

- When connecting to other devices, ensure that the integrity of the shielding is maintained.
- Use shielded cables and wire terminals.