




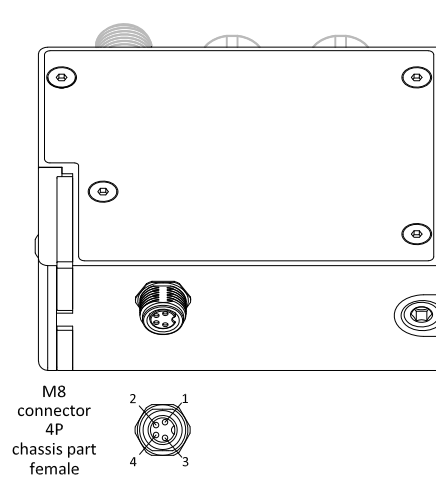

Analog Output: Voltage (A-#-#)

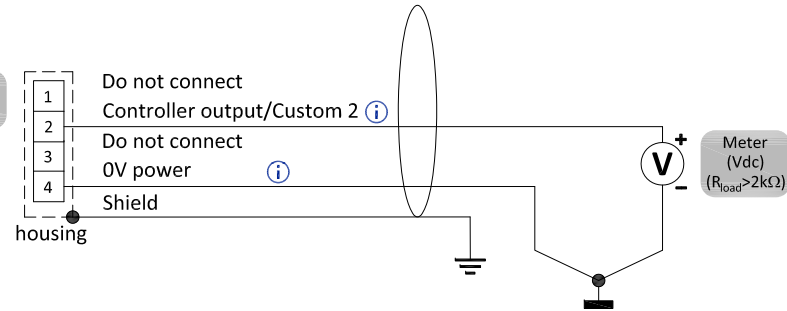

Analog Output: Current (B-#-#)

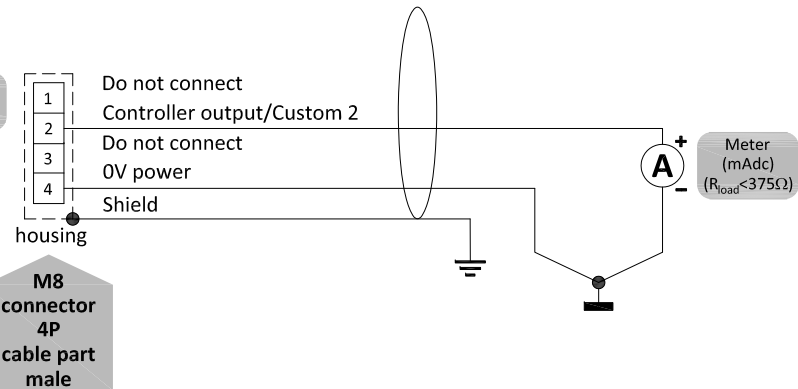

This output has no long cable compensation.



- For reliable measurements, it is important to reduce interference from outside noise on the signals.
- When connecting to other devices, ensure that the integrity of the shielding is maintained.
 - Use shielded cables and wire terminals.