





M12-A
connector
8P
chassis part
male

**Analog Output:
Voltage (A-#-#)**

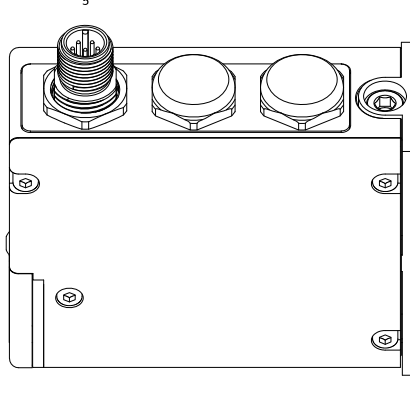

**Analog Output:
Current (B-#-#)**

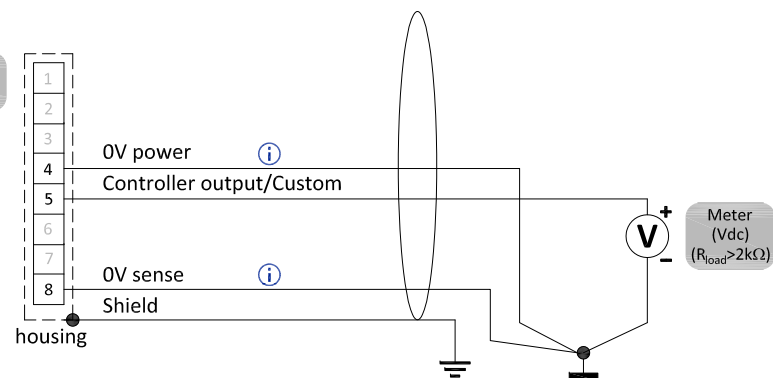

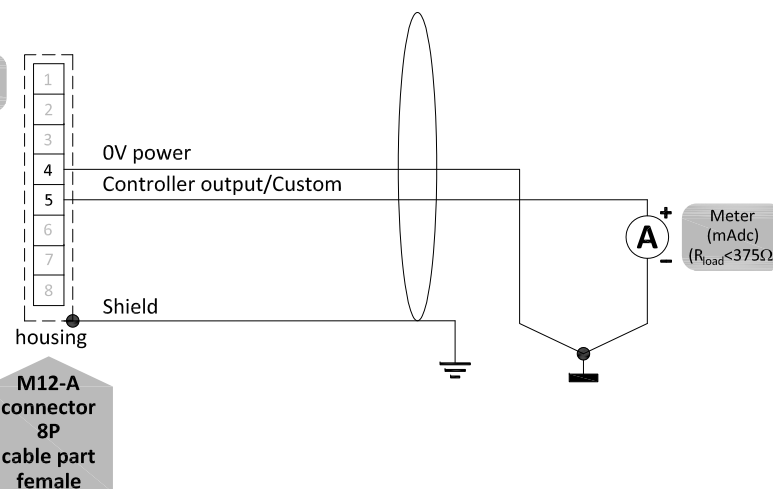M12-A
connector
8P
cable part
female



0V power (PIN 4) and 0V sense (PIN 8) should be separately connected to the 0Vdc terminal at the power supply for long cable compensation. Connect the remaining pins according to the applicable wiring diagram.



For reliable measurements, it is important to reduce interference from outside noise on the signals.

- When connecting to other devices, ensure that the integrity of the shielding is maintained.
- Use shielded cables and wire terminals.