


CANopen

MBC3 Hook-up diagram


ML Series instruments

CANopen connection

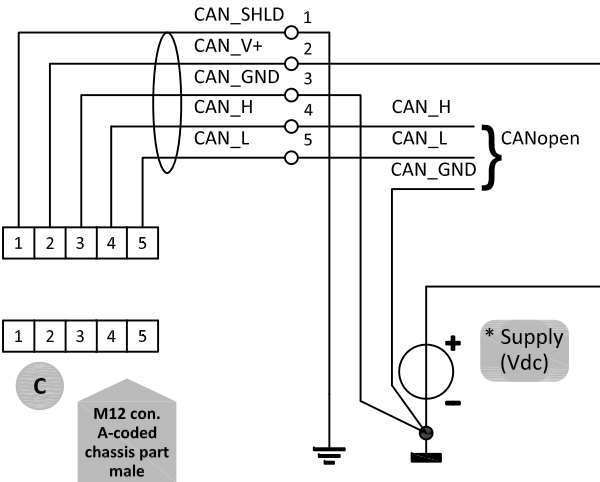

Model key explanation



For other explanation see 9.16.131

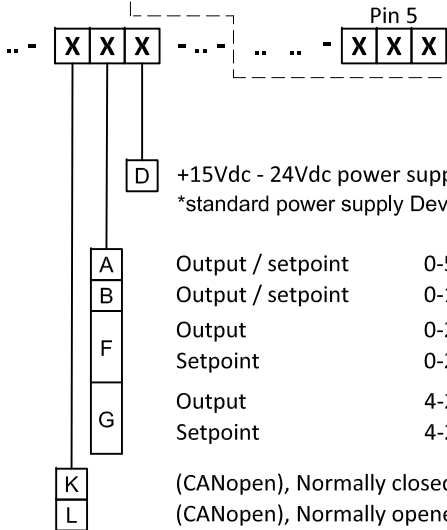

POWER SUPPLY WARNING



Do not power the instrument simultaneously from two different power sources (e.g. bus connection and Plug-in Power Supply). Doing so will damage the printed circuit board irreparably.

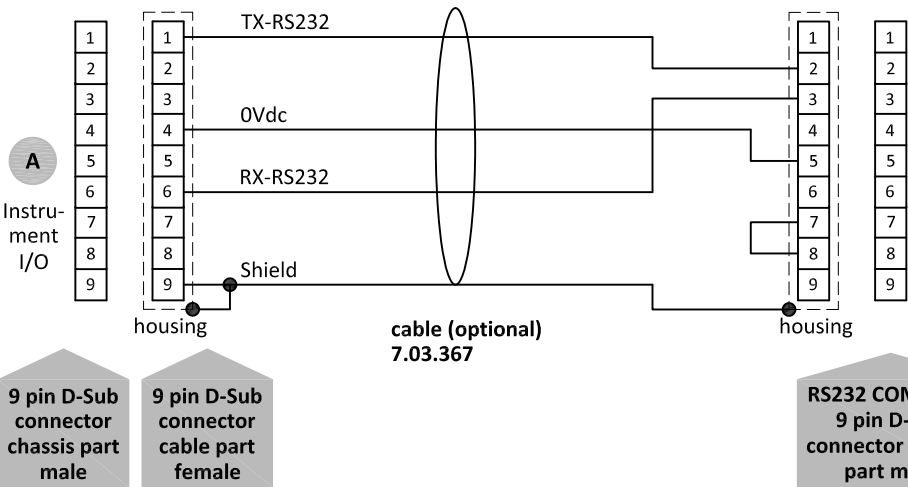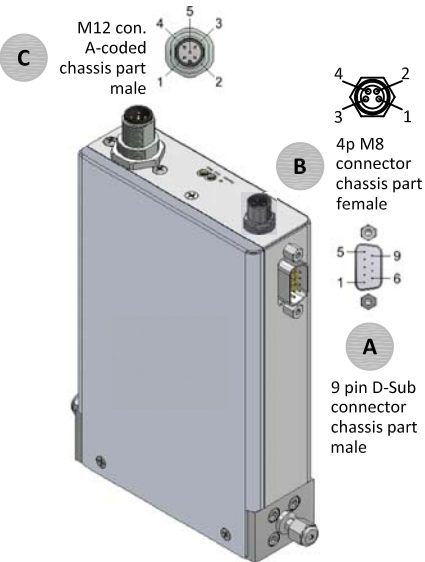

Note:
When using a field bus or RS232, it is not possible to operate the instrument by using the setpoint signal of the analog D-sub connector without changing the value of parameter "control mode".
See doc.nr. 9.17.023 for more details

Note:
Do not connect an external valve to instruments which is set as meter.

Note:
Powering a single instrument is possible by the D-sub connector.
Please consult 9.16.132 for a connection diagram.

Note:
For information about the optional B "Valve/Actuator" connector.
See doc.nr. 9.16.131 for more details.