




M12-A
connector
8P
chassis part
male

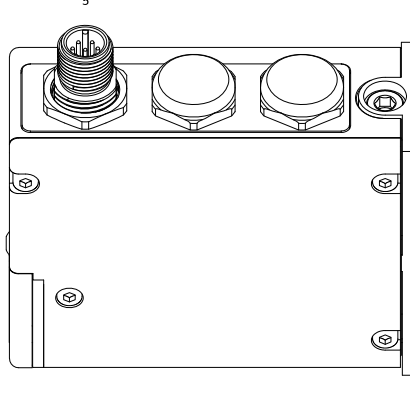


Analog Input:
Voltage (G-#-#)

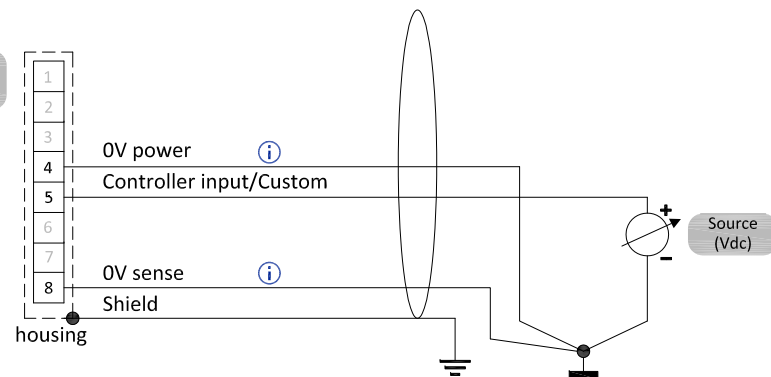

Analog Input:
Current (H-#-#)

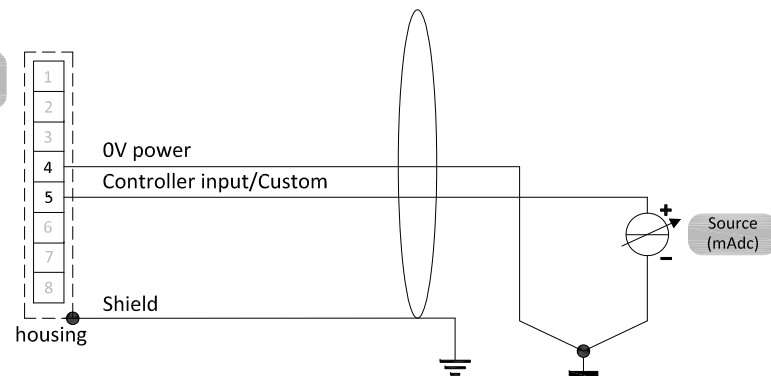

Digital Input:
(I-#-#)

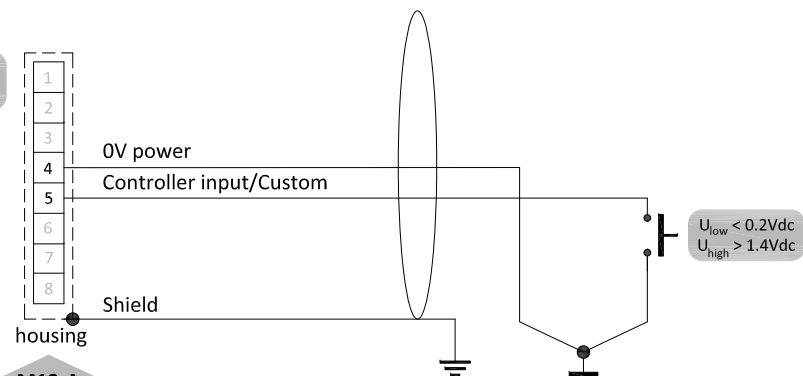

M12-A
connector
8P
cable part
female



0V power (PIN 4) and 0V sense (PIN 8) should be separately connected to the 0V terminal at the power supply. (Impedance = 250kΩ)
Connect the remaining pins according to the applicable wiring diagram.



For reliable measurements, it is important to reduce interference from outside noise on the signals.

- When connecting to other devices, ensure that the integrity of the shielding is maintained.
- Use shielded cables and wire terminals.