




M12-A
connector
8P
chassis part
male

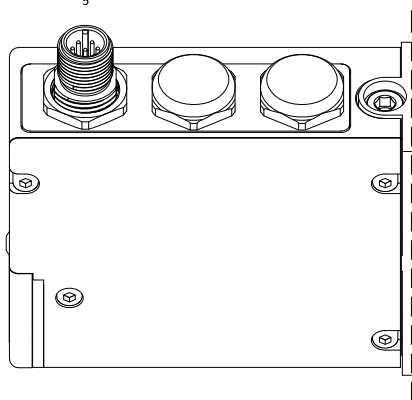

Digital Output:
Shut-off Valve (C-#-#)

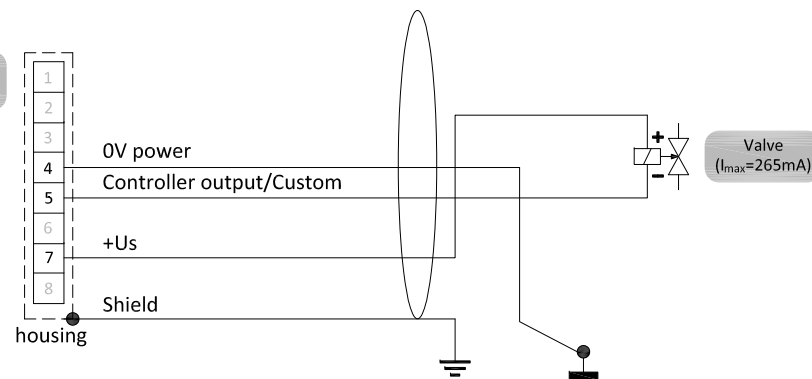

Digital Output:
Frequency (D-#-#)
PWM (E-#-#)
Pulse (F-#-#)

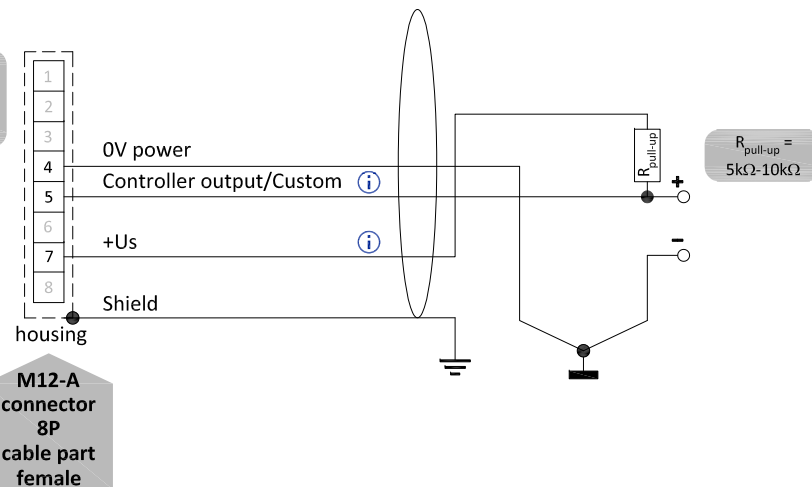

Use Rpull-up (between 5kΩ and 10 kΩ) to create 15-24Vdc at PIN 5.
Pulse output - Active (low) = 0Vdc.
Connect the remaining pins according to the applicable wiring diagram.



For reliable measurements, it is important to reduce interference from outside noise on the signals.

- When connecting to other devices, ensure that the integrity of the shielding is maintained.
- Use shielded cables and wire terminals.