



FLOW-BUS connection

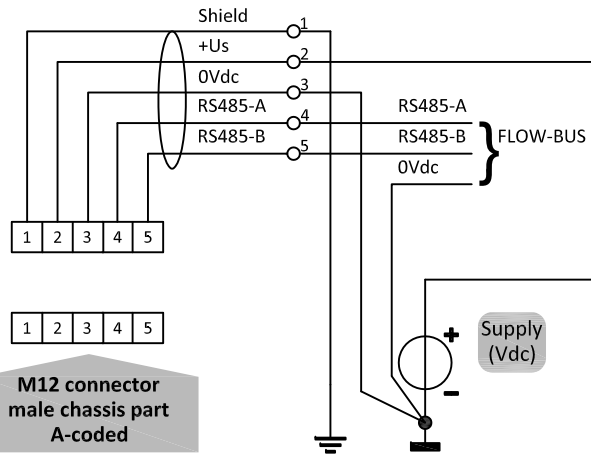

Model key explanation

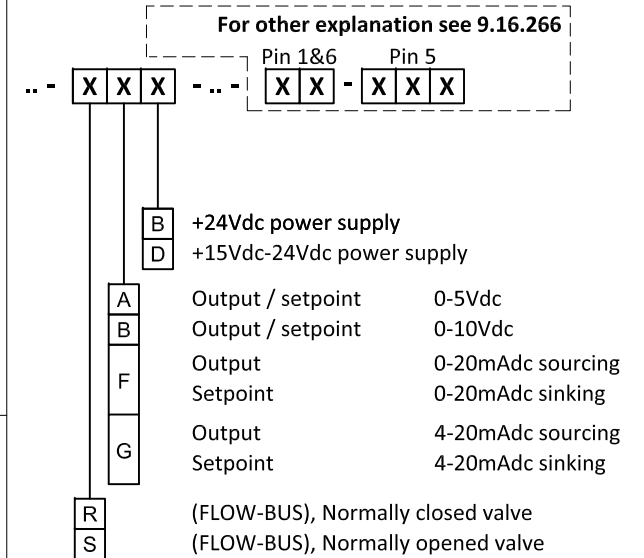


POWER SUPPLY WARNING



Do not power the instrument simultaneously from two different power sources (e.g. bus connection and Plug-in Power Supply). Doing so will damage the printed circuit board irreparably.

M12 connector male chassis part A-coded

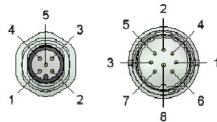


8 DIN connector chassis part male



1	TX-RS232/BUS
2	Analog output
3	Analog input
4	0V power
5	Custom ¹
6	RX-RS232/BUS
7	+Us
8	0V sense

Instrument signals

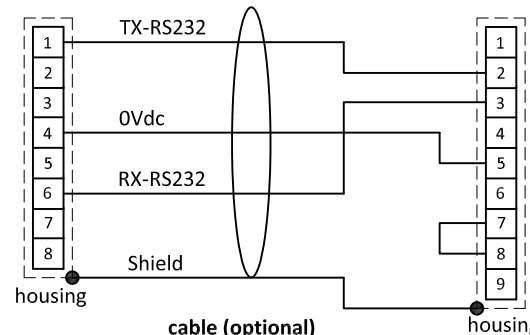

**cable (optional)
7.03.340**

1
2
3
4
5
6
7
8
9

Note:
When using a unit configured for a fieldbus or RS232 I/O, it is not possible to operate the instrument using the analog Input without changing the "control mode" parameter (see instruction manual).
See doc.nr. 9.17.023 for more details.

Note:
Do not connect an external valve to instruments, set as MFM or EPM.

Note:
Powering a single instrument is possible by the D-sub connector.
Please consult 9.16.126 for a connection diagram.

8 DIN connector chassis part male

8 DIN connector cable part female

**RS232 COM -port
9 pin D-Sub connector chassis part male**

Note:
1) Default disabled, 0Vdc.